CHCNAV How to set A+ line with coordinate and azimuth

Introduction

With A+ line with azimuth, users can set A+ line with known coordinates and known azimuth.

Steps

1. Go to Guidelines-Import-A+ line coordinate input.

← Guidelines		
Q Enter Keywords		Search Search by type
A+ Line_1 A+ Line 2023-12-29 10:22		DefaultField
AB Line_1 AB Line 2023-12-29 10:21	A: 12.0001316646994 B: 12.0358348123966 36 26 88.7542340826166 88.7435556371096	5 73.75° offset 6 DefaultField
	3 1	Edit
		Apply
		↓ U-Turn
← Guidelines		Import +
Q Enter Keywords		Search Search Export
A+ Line_1 A+ Line 2023-12-29 10:22		DefaultField
AB Line_1 AB Line 2023-12-29 10:21	A: 12.0001316646994 B: 12.0358348123966 36 88.7542340826166 88.7435556371096 3 1	5 73.75° offset 5 0 DefaultField
		Edit
		Apply
		↓ U-Turn
← Guidelines		Import SLID File
C Enter Keywords		Search Search b XML file
A+ Line_1 A+ Line 2023-12-29 10:22		Defau AB line coordinate inj
AB Line_1 AB Line 2023-12-29 10:21	A: 12.0001316646994 B: 12.0358348123966 36 26 88.7542340826166 88.7435556371096 3 1	6 73.75° offset 6 Defat A+ line coordinate inj
		Topcon file
		Apply
		Ų
		0-Tum



 Give a name for current A+ line, then type the WGS84 BLH coordinate and azimuth with maximum three decimals, finally click Apply to finish the setting and check A+ line on the mainscreen. Also it is available to click *Obtain the current coordinate* to get the current coordinate without typing the coordinate manually.

	hame Latitude and le	ongitude A+line_1
Point A	coordinate	
Longitude	0.00000000000 ° E	
Latitude	0.00000000000 ° N	Obtain the current coordinate
Elevation	30.00 m	dd.mm.ss
A+ line a	ingle	
angle	<u>000</u> °	Tip: The true north direction is 0*, and clockwis is the positive direction
		Apply
+ line coordinate input		
10/200		
A+ line n	Latitude and k	ongitude A+line_1
Point A d	oint A coordinate	
2 Longitude	tude 169.39742839390388 ° E • Obtain the current 1	
Latitude	atitude 65.8604269299209 ° N +	
		dd mm ss
Elevation	<u>30.00</u> m	
Elevation	30.00 m	
Elevation A+ line a angle	<u>30.00</u> m ingle	Tip: The true north direction is 0°, and clockwis is the positive direction
Elevation A+ line a angle	<u>30.00</u> m ingle • <u>000</u> °	Tip: The true north direction is 0°, and clockwis is the positive direction
Elevation A+ line a angle	<u>30.00</u> m ingle : <u>000</u> ° 3	Tip: The true north direction is 0°, and clockwis is the positive direction
Elevation A+ line a angle	<u>30.00</u> m ingle <u>000</u> °	Tip: The true north direction is 0°, and clockwis is the positive direction
Elevation A+ line a angle	30.00 m ingle 000 ° 3	Tp: The true north direction is 0°, and clockwis is the positive direction
Elevation A+ line a angle suidelines	30.00 m ingle 3	Tige The true north direction is 0°, and obokwis is the positive direction
Elevation A+ line a angle suidelines r Keywords	30.00 m ingle 000 ° 3	Tip: The true north direction is 0°, and clockwis is the positive direction Apply

CHC Navigation

Building C, 577 Songying Road, Qingpu, District, 201702 Shanghai, China

Tel: +86 21 542 60 273 | Fax: +86 21 649 50 963 Email: sales@chcnav.com | support@chcnav.com Skype: chc_support Website: www.chcnav.com

Shanghai Huace Navigation Technology Ltd. Building C, 577 Songying Road, Qingpu, District, 201702 Shanghai, China WWW.CHCNAVCOM Tel: +86 21 54260273 Stock Code:300627