## **CHCNAV** How to set Auto U-turn with rows skipping

## Steps

1. Go to Settings - Guidelines to select an AB line, then click the U turn function as below,



2. Select Model1 and select rows skipping number, currently number 0-9 is supported.

/					
← U-Turn Setting					
	Scene	Support U-Turn	_		0
	$\overline{\mathbf{A}}$	<ul> <li>Distance to AB point</li> <li>First Line Turn</li> </ul>	5.0 Turn Left	0	•
Mode1	Mode2	🔯 Skip rows	0		*
		🔯 Max Angle	30.0		
		Forecast Coef	3.5		
		Forecast Time	2.5		
		🔯 Min Forecast Dis	2.0		
		🔯 Distance After Turn	10.0		
$\leftarrow$ U-Turn Setting					
Turning Scene		🔯 Support U-Turn			
		Distance to AB point	5.0	٥	
	K N	First Line Turn	Turn Right		•
Mode1	Mode2	🔯 Skip rows	4		
		🔯 Max Angle	5		
		🔯 Forecast Coef	6		
		Forecast Time	7		
		🔯 Min Forecast Dis	8		
		🔯 Distance After Turn	9		

3. If set *Skip rows* to 0/1, then return to main interface and switch to automatic mode, it will have Left/Right icon for manual setup.





4. If the selected skipping row is 2 or above, it will follow the designed path as below, Turning Scene



## 

## **CHC** Navigation

Building C, 577 Songying Road, Qingpu, District, 201702 Shanghai, China

Tel: +86 21 542 60 273 | Fax: +86 21 649 50 963

Email: sales@chcnav.com | support@chcnav.com

Skype: chc\_support

Website: www.chcnav.com

Shanghai Huace Navigation Technology Ltd. Building C, 577 Songying Road, Qingpu, District, 201702 Shanghai, China WWW.CHCNAVCOM Tel: +86 21 54260273 Stock Code:300627