


How to set the fatigue driving alert

Introduction



In order to ensure the safety, currently it is available to support users to set the fatigue driving alert to remind the users if the time exceeds the threshold.

Steps


1. Go to Settings-Safety.

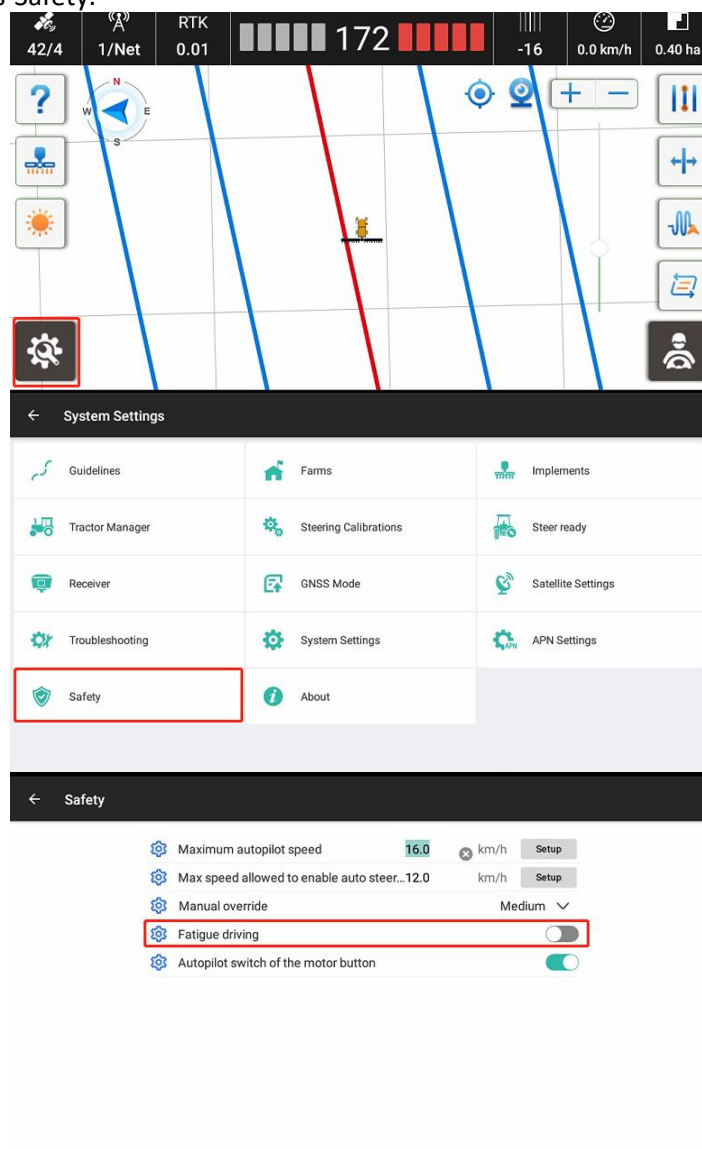

2. Turn on the alarm switch and select the interval period.

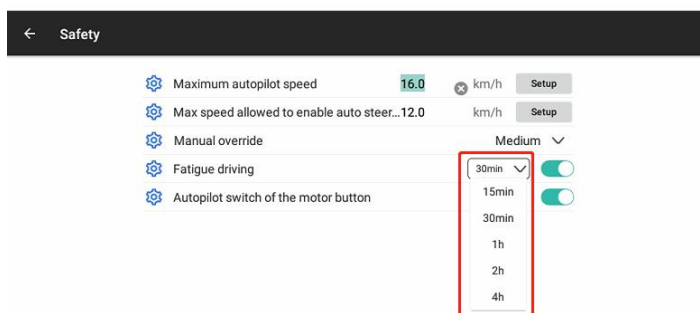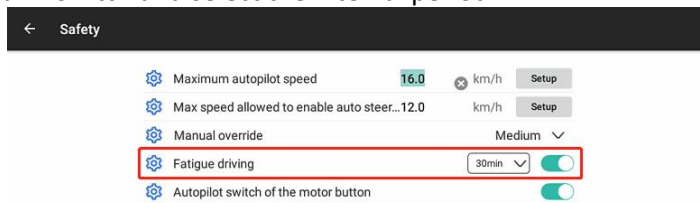

3. Trigger the alarm when the time is up.

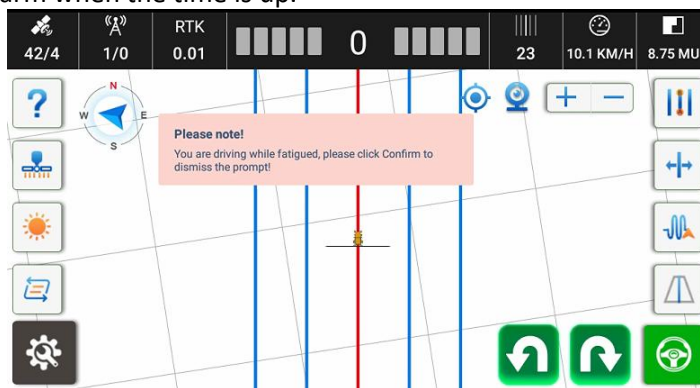



CHC Navigation

Building C, 577 Songying Road, Qingpu, District,
201702 Shanghai, China

Tel: +86 21 542 60 273 | Fax: +86 21 649 50 963

Email: sales@chcnav.com | support@chcnav.com

Skype: chc_support

Website: www.chcnav.com

Shanghai Huace Navigation Technology Ltd.
Building C, 577 Songying Road, Qingpu, District,
201702 Shanghai, China

WWW.CHCNAVCOM
Tel: +86 21 54260273
Stock Code:300627